



INSTRUCTION

[PARTS LIST]



x 1 set

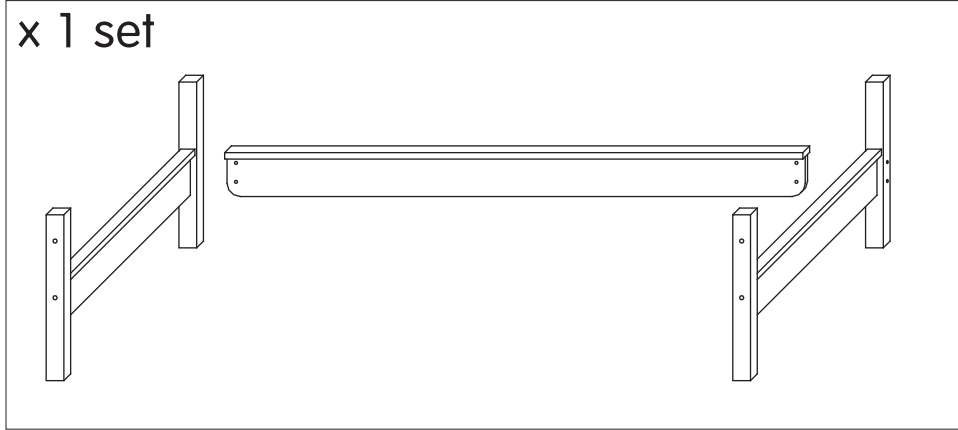

x 1 set

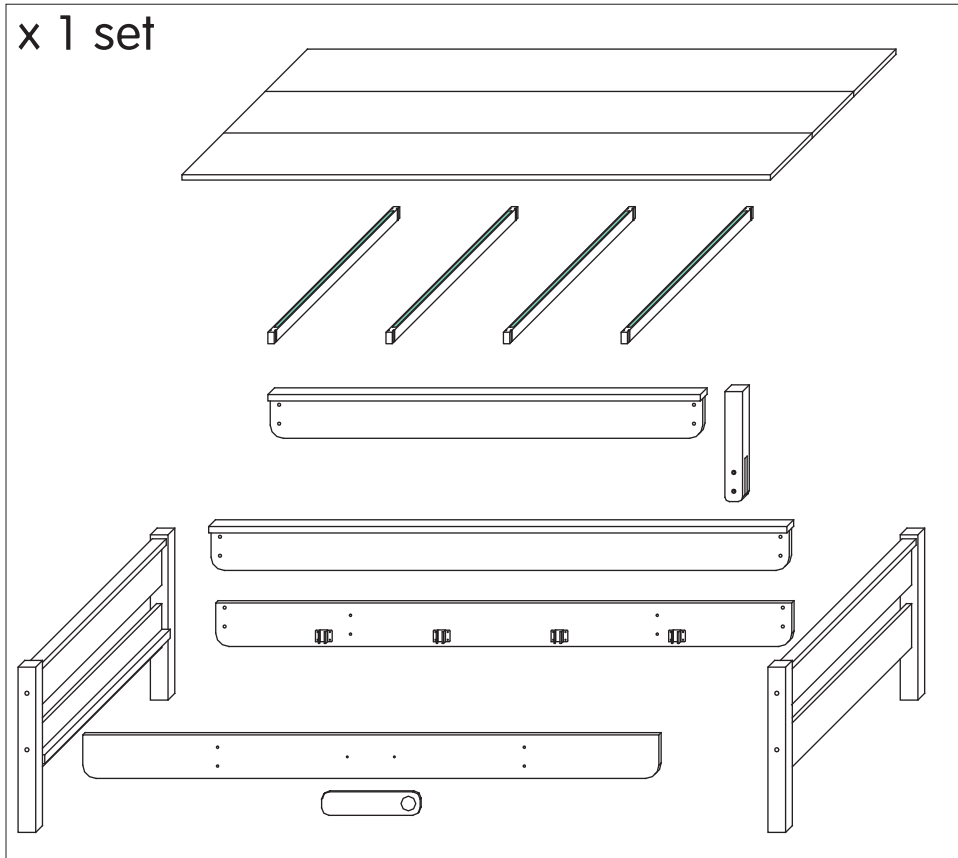

WOODEN BEAR BED SERIES SUPER SINGLE LOW BUNK BED

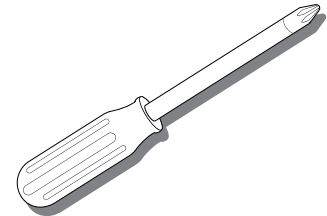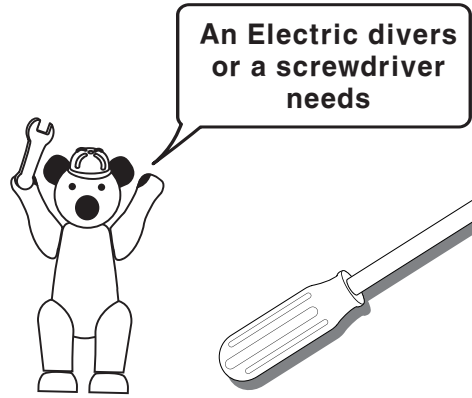



Soopsori Co., Ltd
www.soopsori.com.cn
 All rights resered
 Designed by Soopsori Co., Ltd.

[Hardware list Bolts] scale 1:1

- M8-A** **Z-A** x 2 sets
- M8-B** **Z-A** x 14 sets
- M6-C** x 4 sets
- M6-D** x 2 pcs
- M8-E** x 8 pcs
- PCS** x 18 pcs
- Z-B (2holes)** x 4 pcs



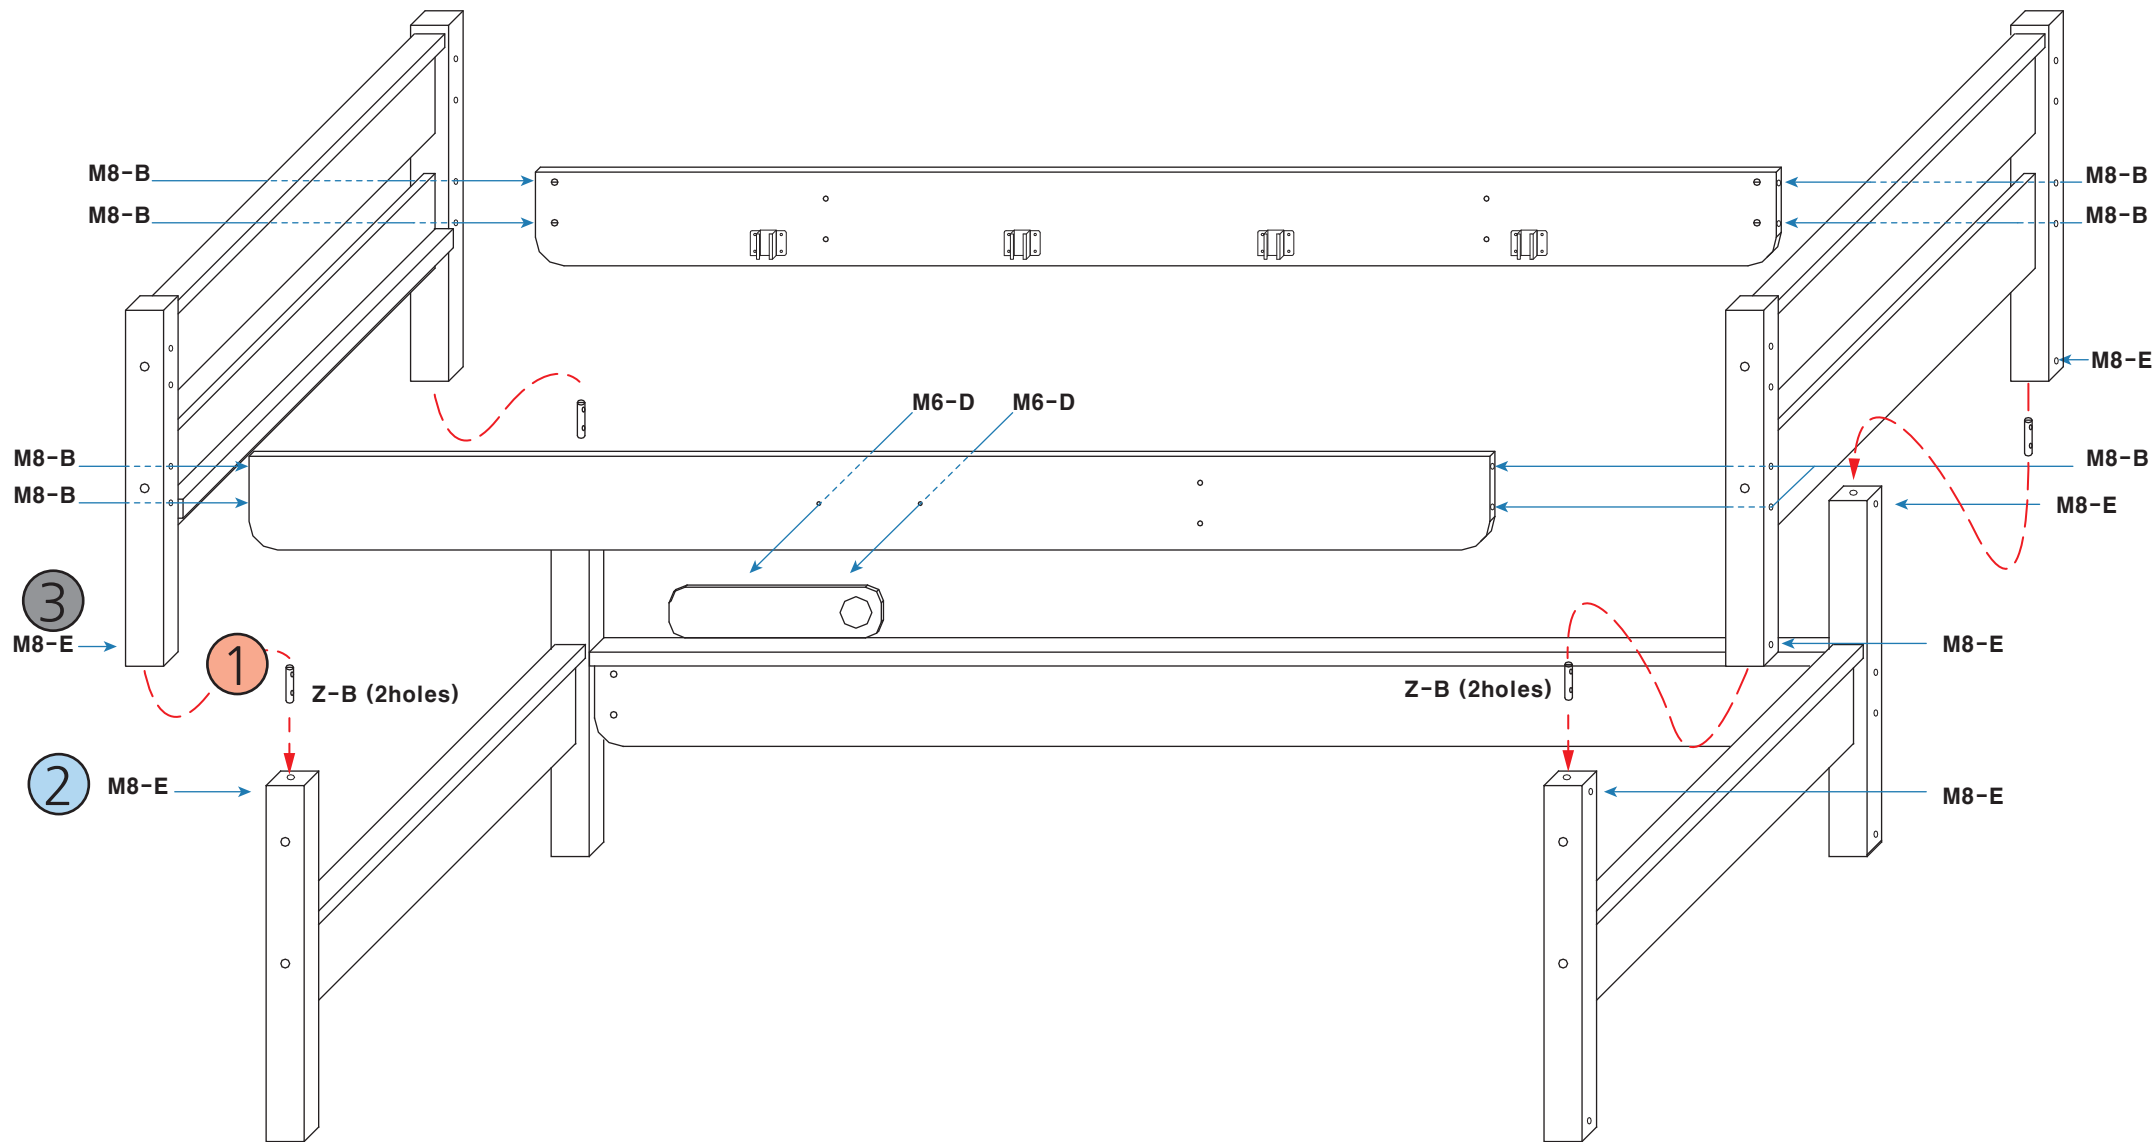

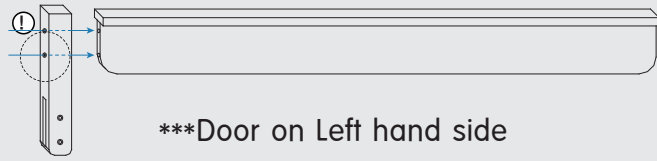


***Door on Left hand side

! Derection of Holes
● OK!!!
○ NO!!



! Don' t screw M8-A before assembling the stair on the upper bed.


3

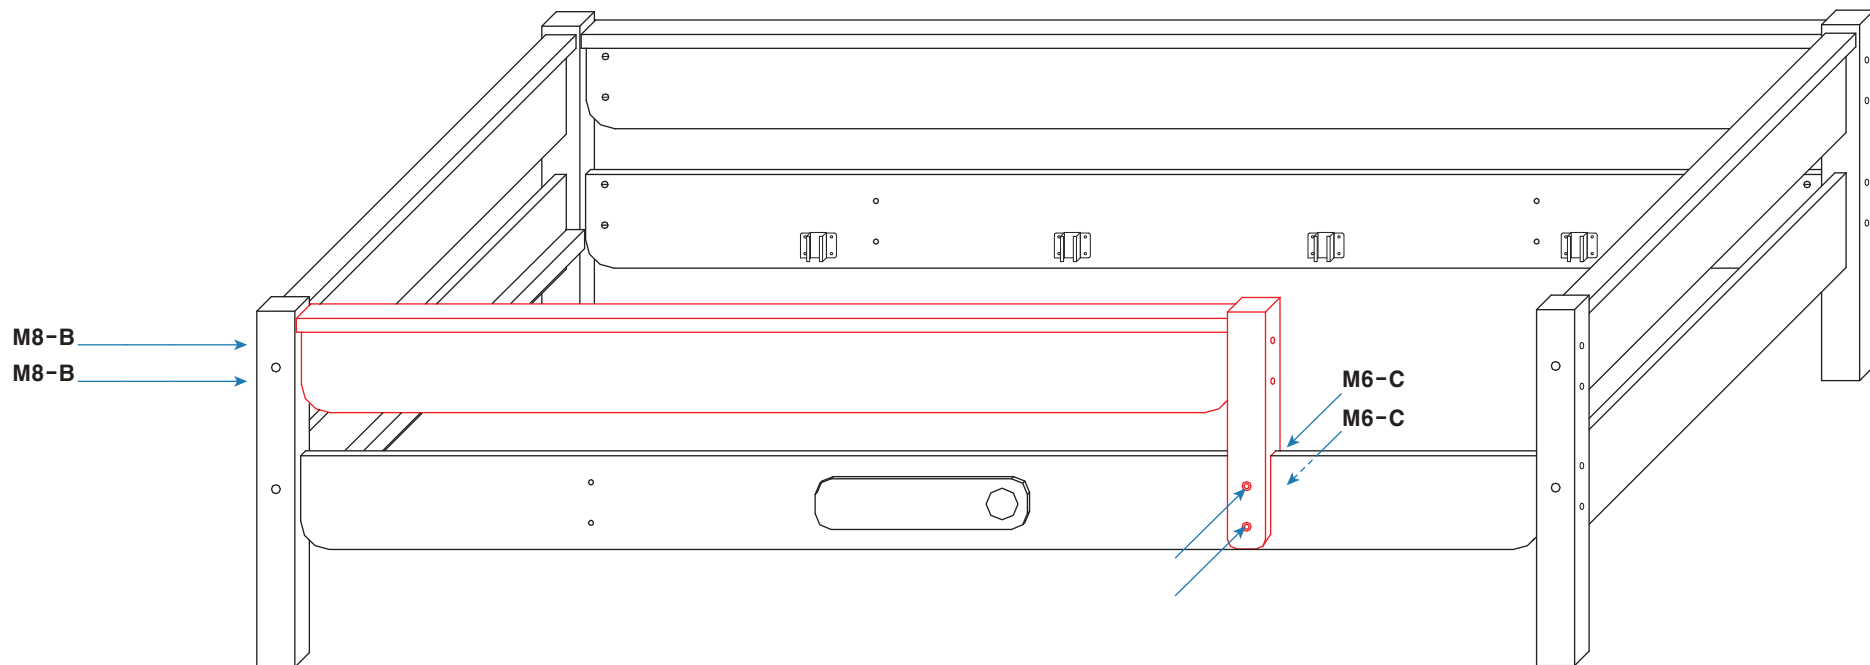

4



Follows **3** **4** **5**

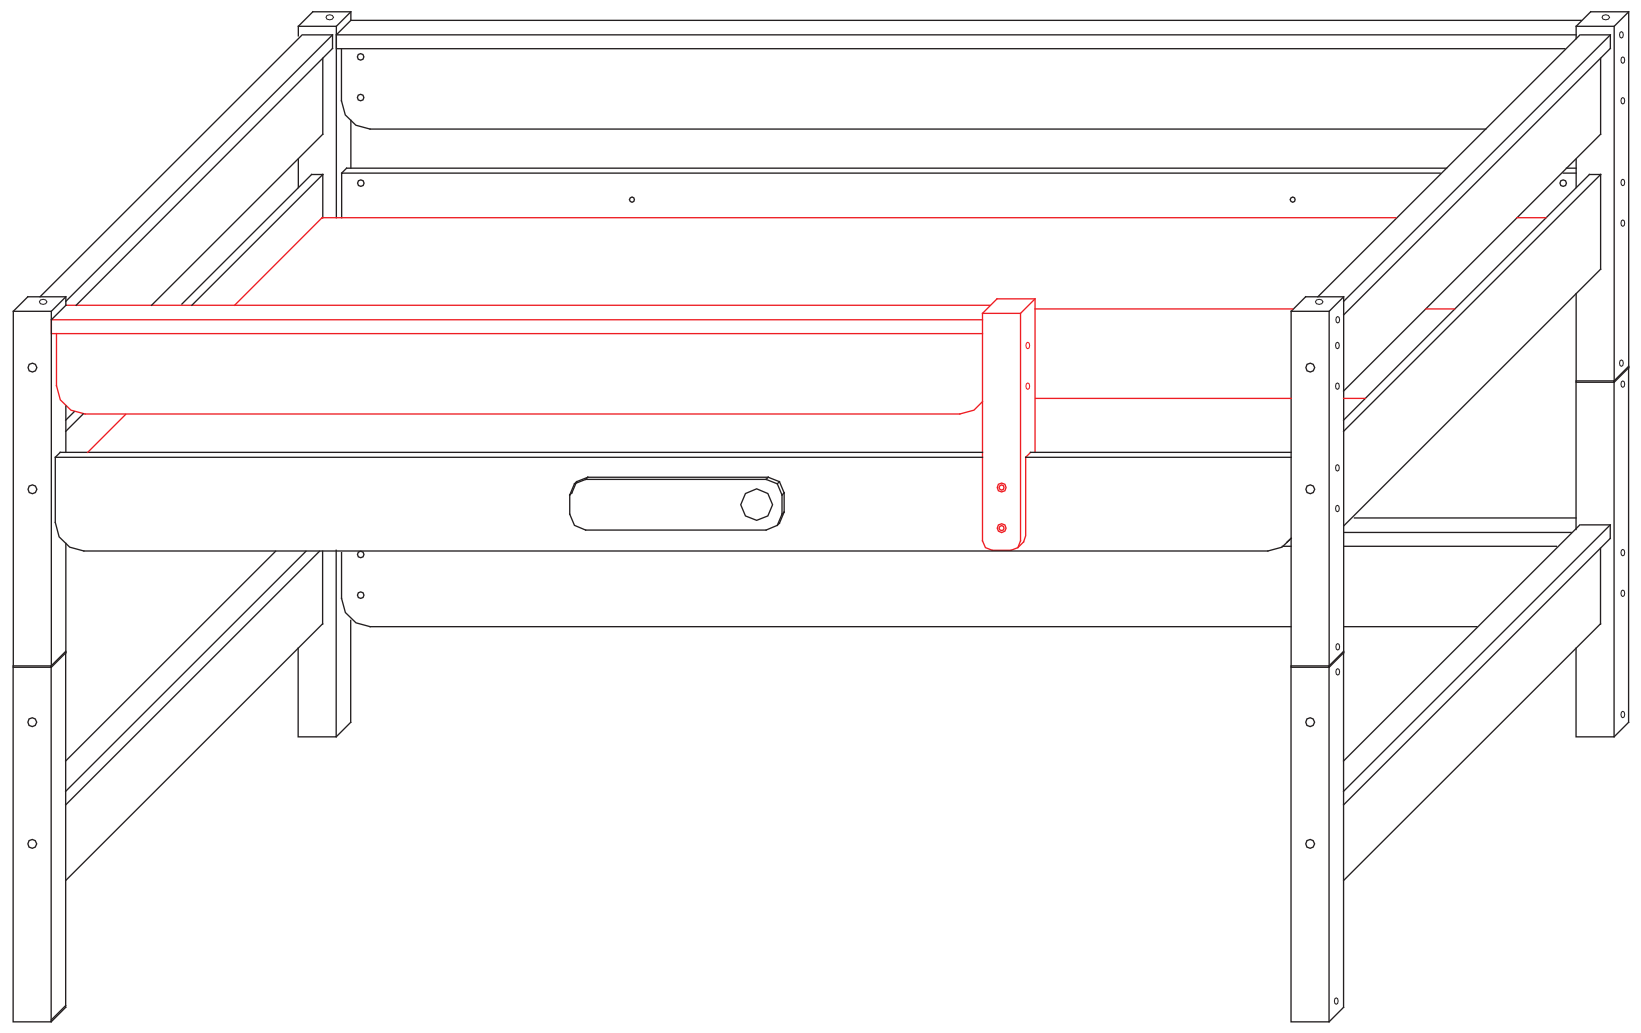

! Please see **3**

